

# Flammable Cabinet

WA810040



It has acquired CE Certification and OSHA 29 CER 1910.106 of American Occupational Safety and Health Administration, NFPA CODE30 of American National Fire Protection Association and Hazardous Chemicals Control Ordinance of State Bureau of Safe Production Supervision and Administration

**SYSBEL Flammable Cabinets for storing flammable liquids (low and median flash point liquid<sup>1</sup>, flash point < 37.8°C), Reduce the risk of fire, to ensure the safety of life and property.**

1. Double-wall construction with 38mm insulating air space for fire resistance.
2. Over 1.2mm thick, fully welded, construction holds squareness for longer life, offering greater protection in a fire.
3. 5.3cm leak tight sump at the bottom of cabinet's maximally catches incidental drips.
4. Door can be fully opened to 180°, easy to operate, three-point latch with a manual lock for better security.
5. Standardized warning label is highly visible and anti-corrosive.
6. Unique spill-catcher shelves catch incidental drips and adjust on 6cm centers.
7. Durable & chemical resistant, lead-free powder coat inside and outside cabinet, reduce effects of corrosion and humidity.
8. 2 inches vents with integral flame arresters in both sides of every cabinet.
9. In terms of OSHA, on outside side panel, there is built-in grounding static connector for easy grounding.




## Flammable Cabinet WA810040

Volume (Gal/L)	Certification	Door type	Ext dimension (H×W×D/cm)	Packing dimension (H×W×D/cm)	Adjustable Shelves (Pcs)	Shelf Loading Weight (Kgs.)	N.W. (Kgs.)	G.W. (Kgs.)	Model
4/15	CE	Single Door/ Manual	56x43x43	59x50x50	1	50	26.5	30.5	WA810040

WA810040



Product details

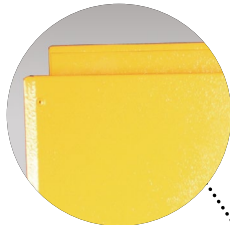

18Ga(1-mm)quality galvanized steel  
Unleaded coating with polish surface,  
which is corrosion and moisture proof



Fireproofing vents to effectively reduce  
the concentration of volatile substances,  
and prevent fire hazards. Special spill-  
proof shelves to avoid chemical leakage  
by accident.



Adjustable shelves with anti-  
leakage design




The cabinet has three-point linkage lock,  
and the door can open 180°  
Two person management in line with  
Hazardous Chemicals Control Ordinance  
(December 1st, 2011 Version)



Shelf bracket welded on both  
sides of cabinet



FM Approved Anti-Static  
Device: Conductor grip combine  
the equipment with the cabinet to  
conduct the static to earth, thus to  
prevent fire accident

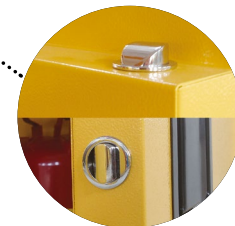

The three-point bullets: Anti-static design  
structure



Newly adopted reflective material  
improves the warning in dark environment