

Flammable Cabinet

WA810600



It has acquired FM & CE Certification and is in strict comply with FM Approval Standard for Storage Cabinets (Flammable and Combustible Liquids) Class Number 6050, OSHA 29 CER 1910.106 of American Occupational Safety and Health Administration, NFPA CODE30 of American National Fire Protection Association and Hazardous Chemicals Control Ordinance of State Bureau of Safe Production Supervision and Administration

SYSBEL Flammable Cabinets for storing flammable liquids (low and median flash point liquid¹, flash point < 37.8°C), Reduce the risk of fire, to ensure the safety of life and property.

1. Double-wall construction with 38mm insulating air space for fire resistance.
2. Over 1.2mm thick, fully welded, construction holds squareness for longer life, offering greater protection in a fire.
3. 5.3cm leak tight sump at the bottom of cabinet's maximally catches incidental drips.
4. Door can be fully opened to 180°, easy to operate, three-point latch with a manual lock for better security.
5. Standardized warning label is highly visible and anti-corrosive.
6. Unique spill-catcher shelves catch incidental drips and adjust on 6cm centers.
7. Durable & chemical resistant, lead-free powder coat inside and outside cabinet, reduce effects of corrosion and humidity.
8. 2 inches vents with integral flame arresters in both sides of every cabinet.
9. In terms of OSHA, on outside side panel, there is built-in grounding static connector for easy grounding.



China's first certified by FM



Flammable Cabinet WA810600

Volume (Gal/L)	Certification	Door type	Ext dimension (H×W×D/cm)	Packing dimension (H×W×D/cm)	Adjustable Shelves (Pcs)	Shelf Loading Weight (Kgs.)	N.W. (Kgs.)	G.W. (Kgs.)	Model
60/227	FM, CE	Double Door/ Manual	165x86x86	182x96x96	2	100	144.2	166	WA810600


WA810600



Product details



18Ga(1-mm)quality galvanized steel
Unleaded coating with polish surface,
which is corrosion and moisture proof

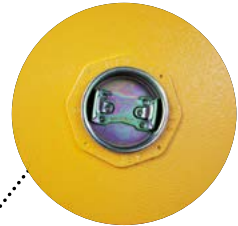

Fireproofing vents to effectively reduce
the concentration of volatile substances,
and prevent fire hazards. Special spill-
proof shelves to avoid chemical leakage
by accident.



Adjustable shelves with anti-
leakage design



The cabinet has three-point linkage lock,
and the door can open 180°
Two person management in line with
Hazardous Chemicals Control Ordinance
(December 1st, 2011 Version)



Shelf bracket welded on both
sides of cabinet



FM Approved Anti-Static
Device: Conductor grip combine
the equipment with the cabinet to
conduct the static to earth, thus to
prevent fire accident



The three-point bullets: Anti-static design
structure

